Notched Bending

Test Set Up

Bluehill Test Method: "Bending_Notch". Follow on-screen directions.

Specimen: No hardness. Dimensions:

- Full height
- Notch depth
- Width
- Notch *radius*:





- Sharp microscope measurement
- Round digital calipers (internal)

Place in fixture: Notch DOWN for metals.

Adjust Crosshead (JOG).

- Do NOT contact.
- Verify LOAD = 0.00

GL Reset.



Run past specimen failure and continue to run until the load *returns* to around (-)0.3 kN.

Final Width at bottom = Width at Notch tip.

Order of tests:

- 1045 Steel (hot rolled)
 - o Sharp
 - o Round
- Aluminum (2024, 6061, or 7075)
 - \circ Sharp
 - o Round
- PMMA
 - Notch UP
 - Notch DOWN

Notched